

No. 68 - EXECUTIVE CAR

<u>Part Number</u>	<u>Location</u>	<u>Unit Price</u>	<u>Min. Quan.</u>	<u>Description</u>
5C-99	G-62	.05	25	Brushplate Hex Nut
19-300	LC	.25	10	Lamp
41-23	N-61	.02	6	Roller Pin
41-25	N-61	.05	6	Collector Arm Pin
41-78	N-81	1.00		Brushplate
45-73	A-61	.02	25	Brushplate Lockwasher
50-102	J-80	.02	25	Brushplate Ball Bearing
68-7	R-47	.10	6	Universal Shaft
68-10	R-17	4.50		Car Body Complete
68-11	R-47	.30	2	Switch Knob
68-30	R-47	.15	4	Idler Gear
68-31	R-47	1.00		Collector Assem.
68-34	R-47	.10	12	Roller
68-35	R-57	2.50		Rear Gear Truck
68-42	R-57	1.50		Front Truck
68-54	R-57	.35	2	Rear Bumper
68-55	R-57	.35	2	Front Bumper
68-92		.25	2	Lamp Socket Assem.
68-100	R-47	6.50		Motor Complete
101-2	H-66	3.50		Reversing Unit
622-121	B-77	.60 pr.	6 pr.	Brush
622-191	B-74	.10 pr.	6 pr.	Brush Spring
671M-22	C-75	.05	12	Retaining Ring (Trucks)
671M-23	C-75	.02	25	Front Truck Washer
2321-135	O-61	.05	12	Collector Arm Spring
2328-170	K-77	.05	12	Collector Insulation
4x1/4	Q-53	.02	25	R. H. S. T. "Z" Reversing Unit Screw
6x5/16	Q-53	.02	25	R. H. S. T. "Z" Collector Screw
6x3/8	Q-63	.02	25	Rec. BH Body Mounting Screw