

Springs 17



**1-48
brush
spring**



**2-121
brush spring**



**2-102
brush spring**



20-80



**65-24
push button
spring**



**72-1
brush spring**

Part No. \$0.00
Part Description
Fits the Following

1-48 \$1.00 A
spring,brush pair
sub OM-22
-257-258-249-249e-2

2-101 \$1.00 A
spring,brush,LH,BAL
-9-9e-10-10e-381-381
BAL locos

2-102 \$1.00 A
spring,brush,RH,BAL
-9-9e-10-10e-381-381
BAL locos

20-80 \$0.55 A
spring, push button
-kw- transformer

65-24 \$0.55 A
spring,pickup
handcar
-65- hand car

72-1 \$0.55 A
spring_std loco
-5-6-7-33-38-42-53-5-
motors except super
motors



**151-27
semaphore
spring**

151-27 \$0.30 A
spring,semaphore
return
-151- semaphore



164-16

truck spring

164-16 \$0.50 A
spring,726 drawbar
-726-736-
drawbar,Berkshire
loco



**203-19
coupler
spring**

203-19 \$1.00 A
spring,front coupler
-201-1663-1656-1665
switchers



**204-34
coupler spring**

204-34 \$0.50 A
flat spring,coupler
-202-204-205-208-201
also loco



**217-78
coupler spring**

217-78 \$0.50 A
flat spring,coupler
-217- also dummy



**222-130
coupler spring**

222-130 \$0.25 A
spring,coupler
center 2243-190
-222-also and f-3



**224E-101
brush
spring**

224E-101 \$1.00 A
spring,motor
brush,pair
-221-224-224E-1661-
tenders



**224E-2
truck spring**

224E-2 \$0.50 A
spring,pilot/rear
truck
-224-224E- loco



**226E-30
truck
spring**

226E-30 \$0.50 A
truck spring
-224-224e-225-225e-
loco-2016-2018-2025



**226E-77
brush
spring**

226E-77 \$0.75 A
spring,brush
-225-225e-226-226e-
locos



246-212

246-212 \$0.50 A
spring,brush
-246- scout loco



249E-22

249E-22 \$0.60 A
spring, brush
prewar-249-249e-



**259E-60
front truck spring**

259E-60 \$1.80 A
spring, front truck
tension
-259-259e-264e-265e
loco



**259E-85
washer
E-unit**

259E-85 \$0.35 A
spring washer, e-unit
E-unit

Springs 17



260E-55

BF

latch spring

260E-55 \$0.35 A
spring, for all prewar
boilerfront latches
-249-249e-261-262-21
loco



364-109 \$0.50 A
spring, motor mtd
tension

-364- lumber loader



397-23
tension spring

397-23 \$0.60 A
spring tension

-397- coal loader



400E-116
brush
spring

400E-116 \$1.50 A
brush spring, heavy
mth

-384-384e-385e-390-:
-BAL-loco



418-12
car door

418-12 \$0.80 A
spring, std car door

-418-419-427-428-42:
pass cars



418T-30
pickup
spring

418T-30 \$0.35 A
spring, pick up
roller, no taper

-35-36-418-419-427-4:
pass



456-32

456-32 \$0.50 A
spring, bumper

-456- coal ramp



480-36
armature
spring

480-36 \$0.50 A
spring, coupler
armature

-480-481-482-483-48:
trucks on postwar



480-36DB
dog bone

480-36DB \$0.50 A
dog bone shaped
flat spring

-480-481-482-483-48:
trucks on postwar



485-32

pickup
armature
spring

485-32 \$0.75 A
spring, contact 2500
pickup

-2500-2521-2522-252:
pass cars



487-22
bay
coupler

487-22 \$0.80 A
spring, center, bay
caboose

-6517-bay window
caboose



520-32

520-32 \$0.35 A
spring, flat

-520- box
cab, 520-30
coupler-202-204-205-:



521-8

coupler spring

521-8 \$1.00 A
spring, alignment

2400 series pass
trucks



581-5
pickup
spring

581-5 \$0.30 A
spring, pickup

-3535-
security, -3540-
radar



601-9
ground
spring

581-9 \$2.10 A
spring, ground

-3535-
security, -3540-
radar



600-130
coupler
spring

600-130 \$0.35 A
spring, motor truck

-200-600-601-602-611



622-133
ground
spring

622-133 \$0.35 A
spring, switcher
ground

-622-6220- diesel
switcher-2023-also



622-145
coupler
spring

622-145 \$0.60 A
spring, R.H.collector

-622-6220- diesel
switcher
collector--2333-2334-



622-146
coupler
spring

622-146 \$0.60 A
spring, L.H.collector

-622-6220- diesel
switcher
collector--2333-2334-



622-191
brush
spring

622-191 \$0.65 A
spring, motor brush

-41-42-51-52-56-53-5



622-57
coil
coupler
center
spring

622-57 \$0.65 A
spring, centering coil
couplers

-622-6220- diesel
switcher coil

